







DS-K260X-G Access Control System Quick Setup Guide

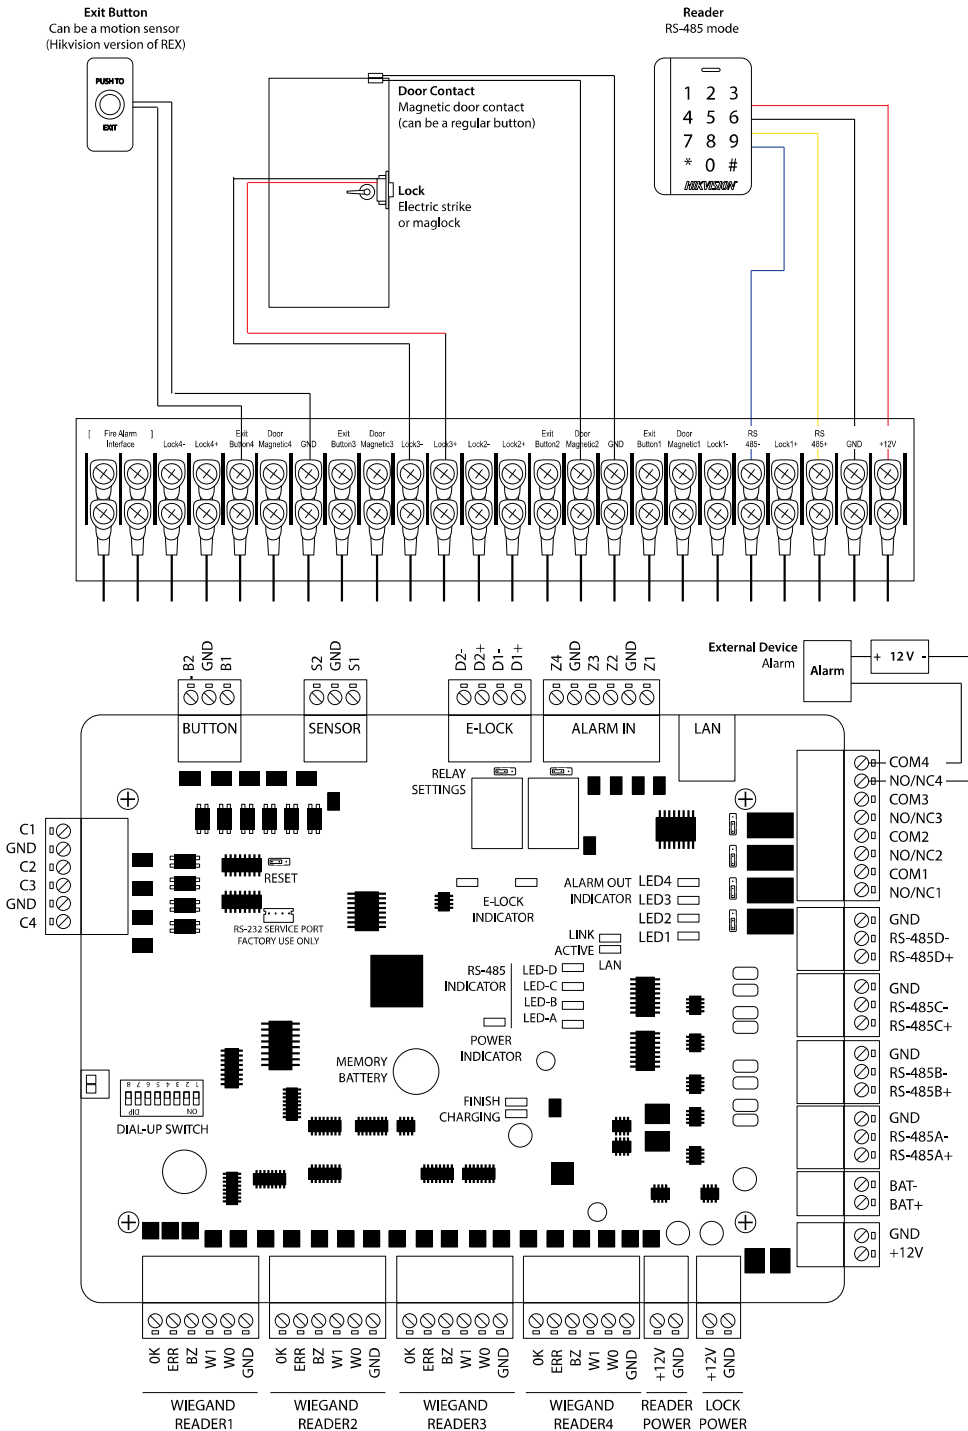





Installing a Door Lock that Requires an NC (Normally Closed) Relay

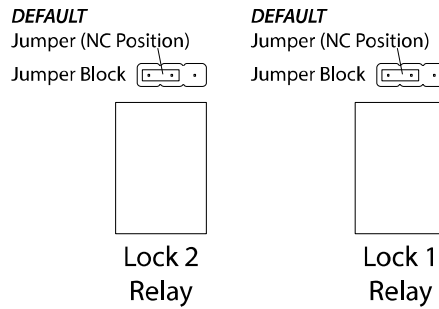

Hikvision RS485 Reader DIP Switch Settings

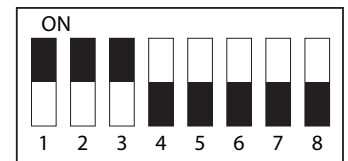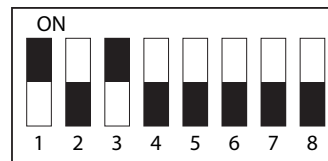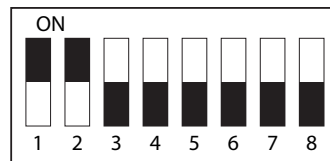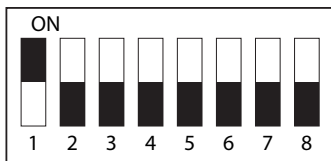

Address 1—Door 1 Entrance Card Reader Address 3—Door 2 Entrance Card Reader Address 5—Door 3 Entrance Card Reader Address 7—Door 4 Entrance Card Reader

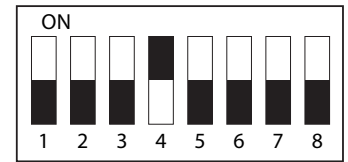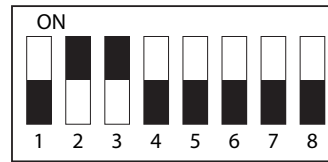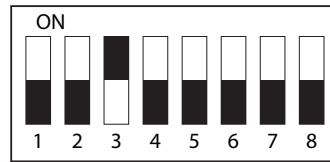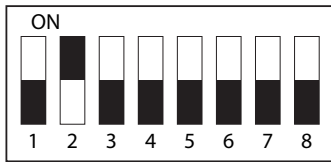

Address 2—Door 1 Exit Card Reader Address 4—Door 2 Exit Card Reader Address 6—Door 3 Exit Card Reader Address 7—Door 4 Exit Card Reader

Equipment	Wire Type	Maximum Length
Wiegand Reader	7 conductors/22AWG(shielded)	500 ft.
RS485 Reader	4 conductors/24AWG(CAT5/5E)	3000 ft.
Electric Strike	2 conductors/18AWG	500 ft.

Support

Hikvision Canada: +1-866-200-6690
e-mail: techsupport.ca@hikvision.com

Hikvision Canada Inc. (Toronto)
2355 Skymark Ave., Suite 300
Mississauga, ON L4W 4Y6

Toll Free: +1 866-200-6690
e-mail: sales.canada@hikvision.com

Connect with us: | www.hikvision.ca

©2022 Hikvision Canada Inc. All rights reserved. Hikvision is a registered trademark of Hikvision Digital Technology Co., Ltd. in Canada and other countries. All other trademarks, service marks, and product or service names are trademarks or registered trademarks of their respective owners. Product specifications and availability are subject to change without notice.

22-050