

<b>Title:</b>	How to upgrade sub module with iVMS-4200	<b>Version:</b>	v1.0	<b>Date:</b>	08/03/2022
<b>Product:</b>	Door station, indoor station			<b>Page:</b>	1 of 4

## Preparation

---

1. This guide takes

Type	Model	Version
Sub module	DS-KD-KP	V1.1.1 build210318
Door station	DS-KD8003-IME1	V2.2.56_ build220607

2. Software: iVMS-4200 Version 3.8.0.4

---

## How to upgrade sub module with iVMS-4200

---

**Step 1. Connect DS-KD8003 with sub module and power on**

**Step 2. Add the DS-KD8003 on iVMS-4200**

**Step 3. Click the icon  to the remote configuration**

<b>Title:</b>	How to upgrade sub module with iVMS-4200	<b>Version:</b>	v1.0	<b>Date:</b>	08/03/2022
<b>Product:</b>	Door station, indoor station			<b>Page:</b>	2 of 4

The screenshot shows the 'Maintenance and Management' interface of iVMS-4200. The 'Device' section is active, displaying a table of devices. The device 'lena8003' is highlighted with a red box. Below the device list, there is a detailed view of the selected device, showing its IP address, device model, firmware version, and security status. The 'Upgrade' button is visible at the bottom right of the interface.

Name	Connect...	Network Pa...	Device T...	Serial No.	Security ...	Resource...	Firmware Upgrade	Operation
lena2604	IP/Domain	10.7.68.34:8...	Access C...	DS-K2604-G202010...	Weak	Online	No available version	[Icons]
lena342	IP/Domain	10.7.68.15:8...	Access C...	DS-K1T342DWX202...	Weak	Online	No available version	[Icons]
lena8003	IP/Domain	10.7.68.102...	Door Stat...	DS-KD8003-IME101...	Weak	Online	No available version	[Icons]

  

IPv4	IPv6	Device Model	Firmware Version	Securi...	Port	Enhan...	Serial No.	Boot Time	Added	Suppo...	Hik-C...	Operation
10.7.68.11	::	DS-2CD2747G2-LZS	V5.7.10build 220608	Active	8000	8443	DS-2CD2747G2-LZS20210329AAW...	2022-08-0...	No	Yes	Close	[Icons]
10.7.68.15		DS-K1T342DWX	V3.3.5build 220310	Active	8000	N/A	DS-K1T342DWX20220310V030305...	2022-08-0...	Yes	Yes	Enable	[Icons]
10.7.68.34		DS-K2604-G	V2.0.5build 201027	Active	8000	N/A	DS-K2604-G20201027V020005ENJ...	2022-08-0...	Yes	N/A	N/A	[Icons]

## Step 4. Under remote configuration: Maintenance -> Upgrade -> Sub Modules.

The screenshot shows the 'Configuration' interface, specifically the 'Upgrade & Maintenance' section. The 'Maintenance' menu item is highlighted in the left sidebar. In the 'Upgrade' section, the 'Sub Modules' option is selected under the 'Upgrade Settings' dropdown. A note at the bottom states: 'Note: The upgrading process will be 1 to 10 minutes, please don't disconnect power to the device during the process. The device reboots automatically after upgrading.'

<b>Title:</b>	How to upgrade sub module with iVMS-4200	<b>Version:</b>	v1.0	<b>Date:</b>	08/03/2022
<b>Product:</b>	Door station, indoor station			<b>Page:</b>	3 of 4

## Step 5. Import the upgrade file for network upgrading and click “Upgrade” then done.

The screenshot shows the Hikvision configuration interface. On the left is a navigation menu with categories like Local, System, Maintenance, Security, and Network. The main area is titled 'Upgrade & Maintenance' and contains several sections: Reboot, Restore Parameters, Export, Import Config File, and Upgrade. The Upgrade section is highlighted with a red box and contains a dropdown for 'Sub Modules', a file input field with the path 'D:\Wanyu非视频专家\product materia', and an 'Upgrade' button. Below the file input, there is a note: 'Note: The upgrading process will be 1 to 10 minutes, please do not power to the device during the process. The device reboots automatically after upgrading.'



<b>Title:</b>	How to upgrade sub module with iVMS-4200	<b>Version:</b>	v1.0	<b>Date:</b>	08/03/2022
<b>Product:</b>	Door station, indoor station			<b>Page:</b>	4 of 4

**First Choice for Security Professionals**  
**HIKVISION Technical Support**