

TECHNICAL BULLETIN

Title:	Connecting a microphone to HikVision Cameras				
Date:	06/11/2014	Version:	1.0	Pages	2
Product:	PRO Series Special order IP cameras with Flying leads				
Action Required:	Information only				

The PRO Series Special order IP cameras have 17 flying leads. Those are used for alarm input/output, audio input/output and RS485 (**Figure 1**).

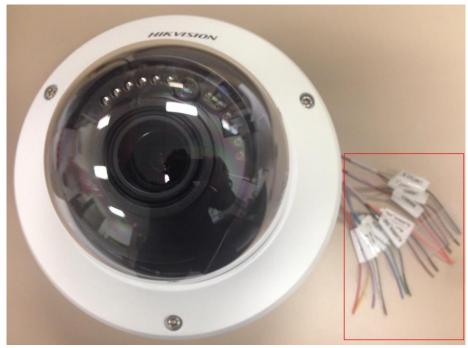


Figure 1

Even though the leads are labeled, sometimes it is unclear which wires need to be used together. **Table 1** shows the definition of each wire, as well as the wires that should be used together.

Color	Label	Definition			
Brown	ALARMINA	Alarm In #1	Ţ	Alarm input #1	
Black	ALARMIN_GND	Alarm Ground	J		
Orange	ALARMINB	Alarm in #2	7	Alarm input #2	
Black	ALARMIN_GND	Alarm Ground		That in par // 2	
Green	OUT1A	Alarm output contact	1	Alarm output #1	
Blue	OUT1B	Alarm output contact	-	Thaim output #1	
Purple	OUT2A	Alarm output contact		Alarm output #2	
White	OUT2B	Alarm output contact	7		
Black	GND	Ground		Ground*	
				Giouna	

Table 1 (Continues on next page).

- 1 -Hikvision USA, Inc.

908 Canada Court, Industry, CA 91748 Phone: 909-895-0400 Fax: 909-595-0788

Email: techsupport@hikvisionusa.com Website: http://www.hikvision.com



TECHNICAL BULLETIN

Title:	Connecting a microphone to HikVision Cameras					
Date:	06/11/2014	Version:	1.0	Pages	2	
Product:	PRO Series Special order IP cameras with Flying leads					
Action Required:	Information only					

Color	Label	Definition]
Black	LINEIN_GND	Microphone input ground	<u> </u>
Red	RIN/MIC+	Microphone input +	► Microphone Input**
Black	LIN/MIC-	Microphone input -	
Grey	LINEOUT_R	Right audio output	Audio Output
Brown	LINEOUT_L	Left audio output	Audio Output
Black	LINEOUT_GND	Audio output ground	
Yellow	RS485-	RS485+	R S485
Red	RS485+	RS485-	لـ

Table 1 (Resumed).

*Ground- Ground is used only when there is a need to ground the alarm output circuit. The ground wire is connected to the camera's metal base.

** Microphone Input – Depending on the type of the microphone (line level or mic level), the "Microphone input ground" might or might not be used (please refer to the "TECHNICAL BULLETIN MICROPHONE CONNECTION" technical bulletin).

Email: techsupport@hikvisionusa.com Website: http://www.hikvision.com